

Installation

- 1. Insert SD card.
- 2. Connect camera (VIDEO IN) and monitor (VIDEO OUT).
- 3. Connect microphone (AUDIO IN) and Speaker (AUDIO OUT).
- 4. Connect power cable (DC 12V) and supply power.

Remarks

- * Audio is mute on live mode, but it is activated on playback mode.
- In case of displaying no image on the monitor, disconnect power cable and reconnect it.
- \star Before inserting SD Card, it should be formatted in <code>'FAT32'</code> on PC.
- * Sandisk Card has been tested with AKR-40T
 The compatibility with other brands is not guaranteed
 -up to SDHC SandDisk 8G

Menu Mode

Press 'MENU' button of the remote control in order to access OSD menu Enter password. Default password is '0000'.

Press 'ENT' button 4 times in a consecutive way to enter the password.

MODEL	DVR-40T
VERSION	1.x
PASSWORD	* * * *

Language Setup

OSD MENU > SYSTEM SETUP > LANGUAGE SETUP

Ø	SYSTEM SETUP	
	VIDEO SETUP	
Ň	EVENT SETUP	
\mathcal{P}	SUB MENU	
DEFAULT OPTION :		
•		
LANGUAGE SETUP : English		
VIDEO OUTPUT : NTSC		
BRIGHTNESS : NormalD		

Setect Language : English, French, Dutch, German, Spanish * Refer to the manual for more details.

PASSWORD Change

OSD MENU > SUB MENU > PASSWORD ENABLE

Ø	SYSTEM SETUP	
	VIDEO SETUP	
25	EVENT SETUP	
ρ	SUB MENU	
DEFAULT OPTION :		
•		
PASSWORD ENABLE : Yes		
CURRENT PASSWORD : ****		
NEW PASSWORD :		
CONFIRM PASSWORD :		

Playback

Play recoded files using the remote control

- * Refer to the next page on how to use the remote control.
- * Refer to the manual for more details.

Attention

- * Do not take out the SD card or turn off K-40T while it is in record mode. It may damage SD card.
- * When in record mode, turn off SD power by first pressing recording button for 3 seconds and then take the SD card out.

DVR-40T QUICK GUIDE

* Refer to the manual for more details.

Recording

Make sure SD card is properly inserted into the slot.

- Press 'REC' button on the board or on the remote control in order to record.
- * Refer to the manual for more details.

